



REQUIRED TOOLS:



Squeegee
Plastic ID card will work



Tape
Masking or Painters



Knife
Optional

STAIR STICKER INSTALLATION GUIDE

1/2023

1



Lay out stair stickers so they can flatten out before beginning installation. This will allow the material to be easier to manage. Make sure all stickers are accounted for and that none of the pieces are damaged or missing.

Thoroughly clean stairs using soapy water. *(Do not use ammonia-based cleaners.)* Clear any debris and make sure stairs are completely dry before applying stair stickers.

2



The stairs should now be dry and debris free.


With the backing material still attached, begin placing the stickers on the stairs and secure them in place using masking or painters tape.

Make sure the stickers fit properly and are straight. Make any adjustments as needed before moving onto the next step.

Need help or have questions? Please call us at 816-916-1377.



3

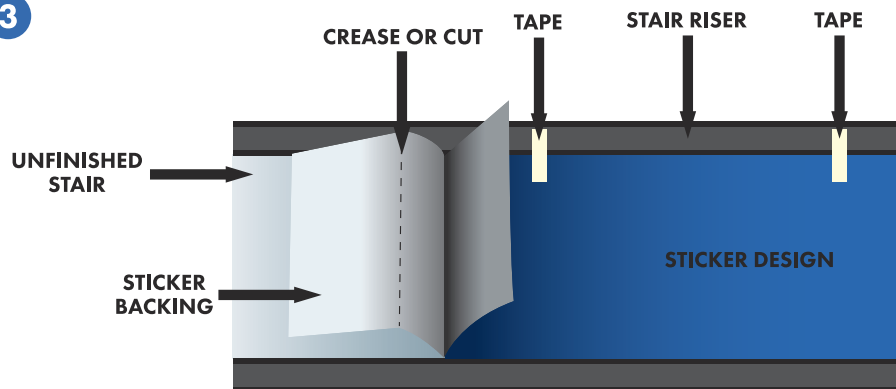

Begin on any step of your choice, usually top to bottom or bottom to top.


Pull the perf backing away from the perf adhesive side. Crease or cut the sticker backing about 8" from the left edge and lay the exposed sticker adhesive side flat against the stair.

Using the squeegee, carefully apply the adhesive side to the stair starting from the center (closest to the crease) and working up and out. This doesn't require a lot of pressure, just enough to make sure the adhesive sticks to the stair.

If air bubbles or wrinkles begin to appear, peel the sticker back and smooth that area out while applying.

Make sure the top is aligned and secure before moving to next step.

4

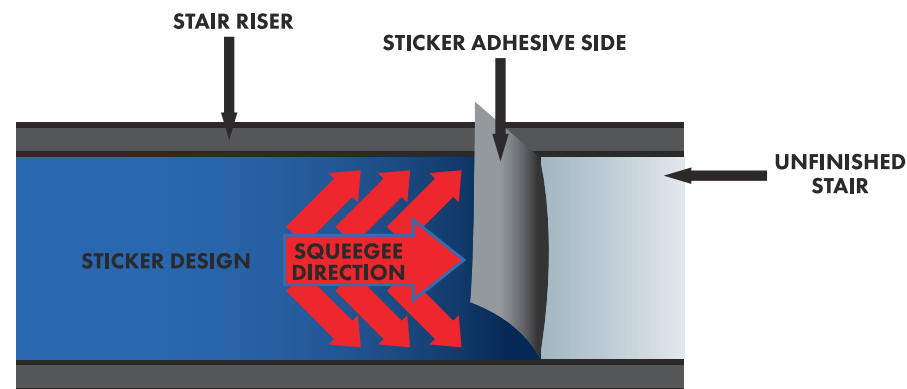

With the top aligned and left edge secured to the stair, start pulling the sticker backing away from the sticker material about 10" at a time. Make sure to keep the material from touching the stair at this time. Move, reapply, or discard any tape as needed.

Using the squeegee, press the sticker to the stair working from the center out to the edge. Remember to use just enough pressure so the sticker material adheres to the stair. If wrinkles or air bubbles begin to appear, peel back the material to smooth it out.

Work all the way to right edge about 10" at a time. Once completed, smooth back over the entire sticker to increase the bond between sticker and stair.

5



Repeat above steps until all stair stickers are installed. Any leftover backing material or tape can be discarded.

If stairs stickers become dirty:

The stickers are protected by a laminate and can be wiped off with a wet cloth. *Do not over saturate the stickers.* Wipe dry once all dirt or debris is clear.

Tap Here For More Resources. www.mascotjunction.com/window-perf-install

All Done? Please send pictures of your installation to info@mascotjunction.com

