





BACKDROP SETUP INSTRUCTIONS

Please follow this link to watch a short video from Mascot Junction.


<https://youtu.be/uWsFPXTJV78>

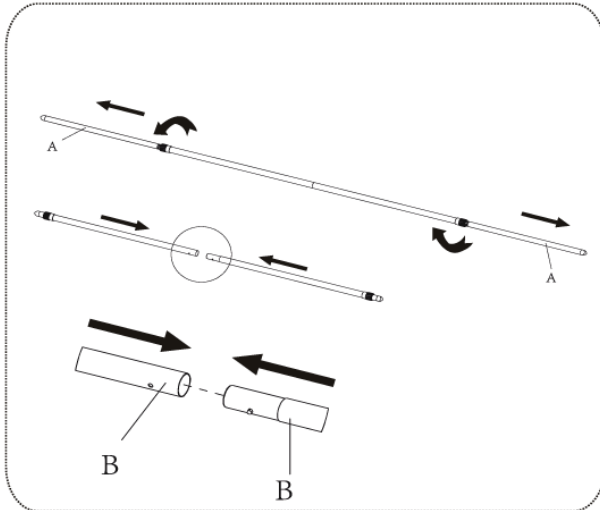


- ① To connect B-B, pull out pole A to the limited stop then tighten the plastic bolt. Same way to the pole C-D.

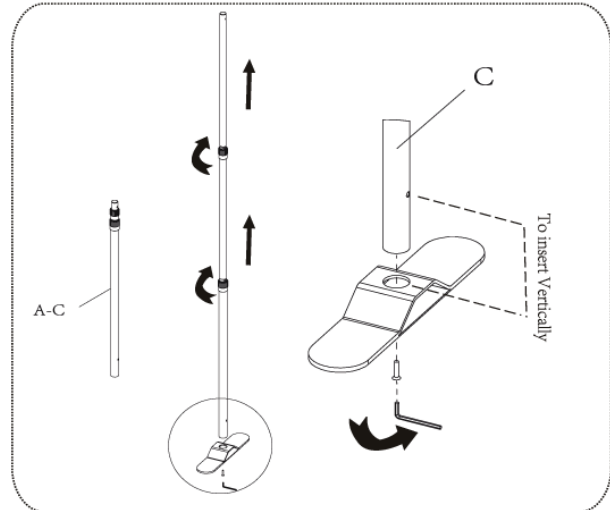


- ② To insert pole A-C into the socket of base vertically then tightening; Afterwards, screw off A-C to the limited stop and screw up the plastic bolt.

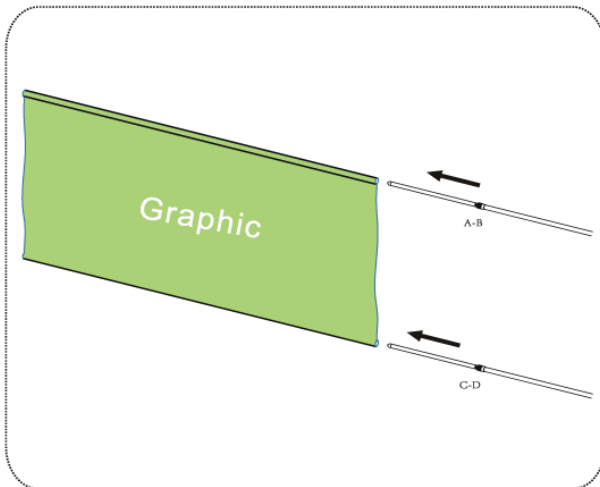

- ③ Put pole A-B and pole C-D through the fabric banner hem.

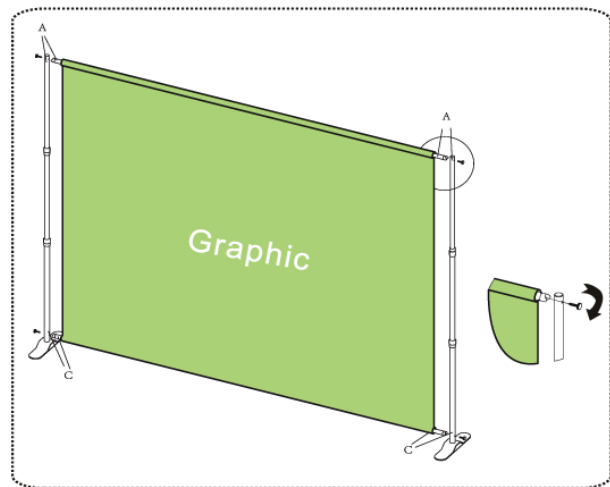

- ④ Use right number of screws for tightening.

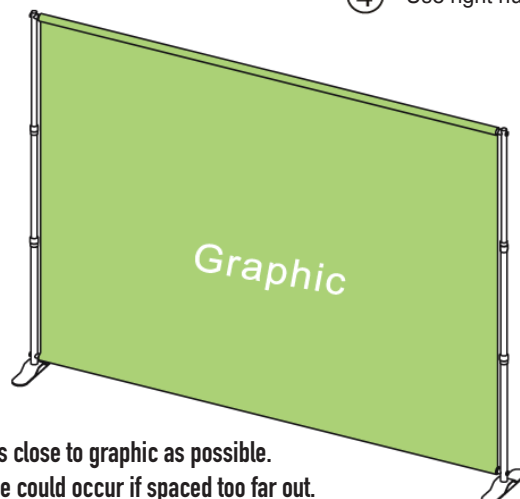

* Keep side frames as close to graphic as possible.
Sagging and breakage could occur if spaced too far out.